



## Connection of one alarm level and fault

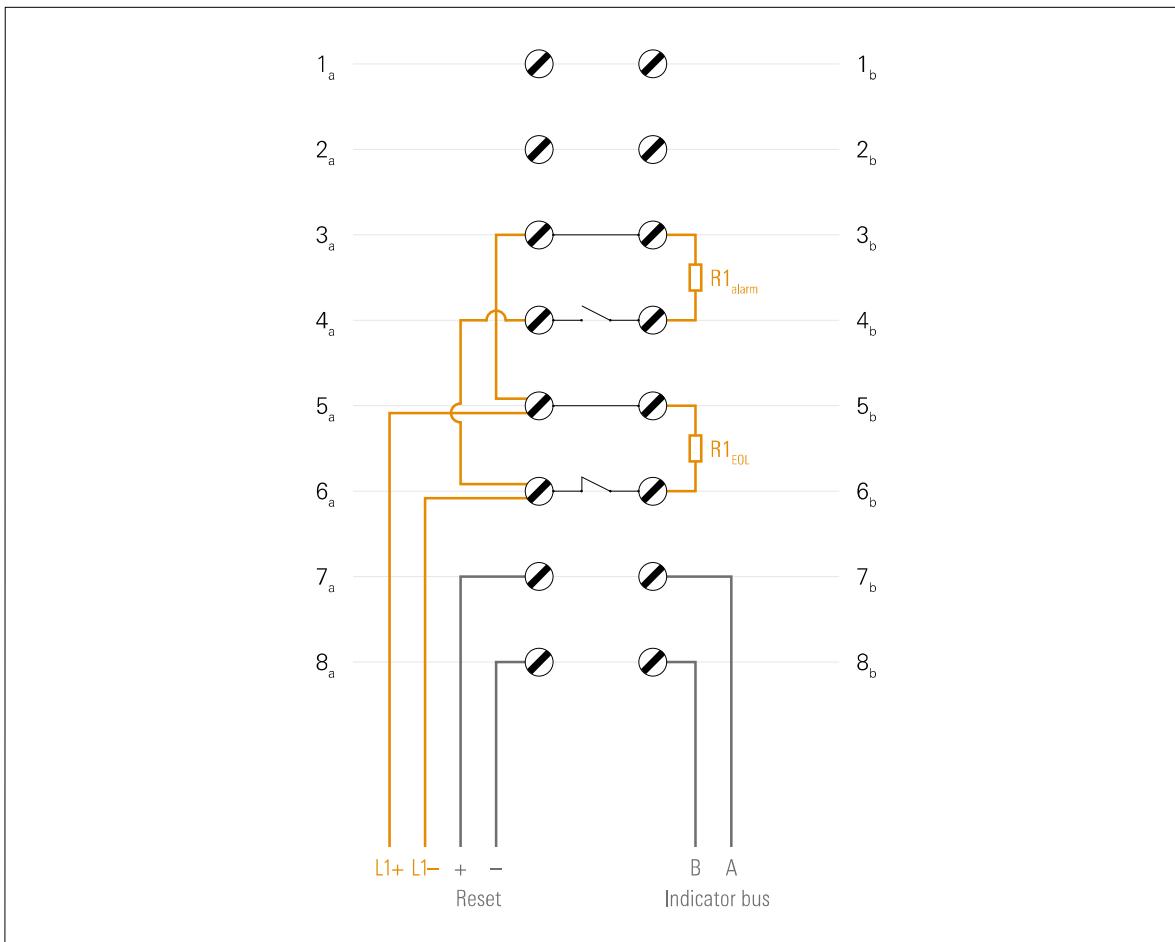


1 bus coupler input is required to connect the reports according to the circuit diagram, whereby the fault is looped into the alarm. The general operating state is shown.

## Circuit diagrams

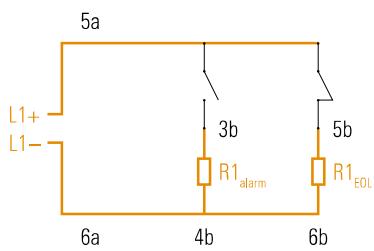


Main alarm + fault

Connection of two alarm levels (pre-alarm, main alarm) and fault

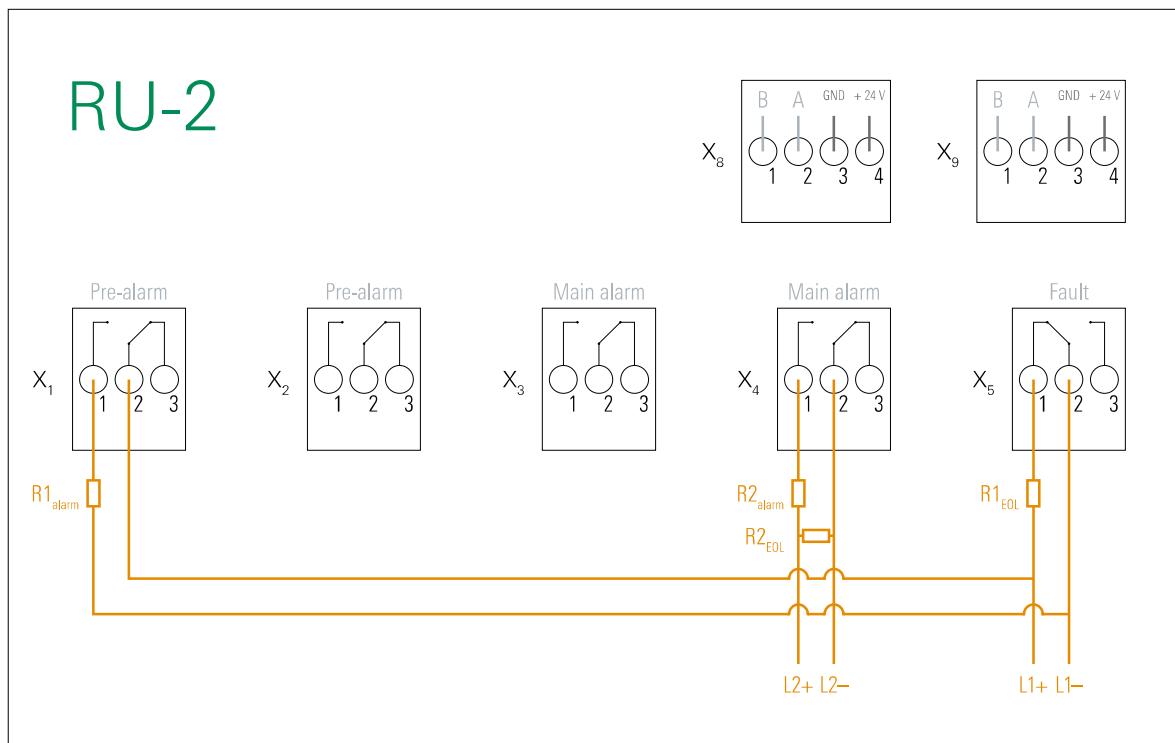

2 bus coupler inputs are required to connect the reports according to the circuit diagrams, whereby the fault is looped into the pre-alarm.  
The general operating state is shown.


### Circuit diagrams

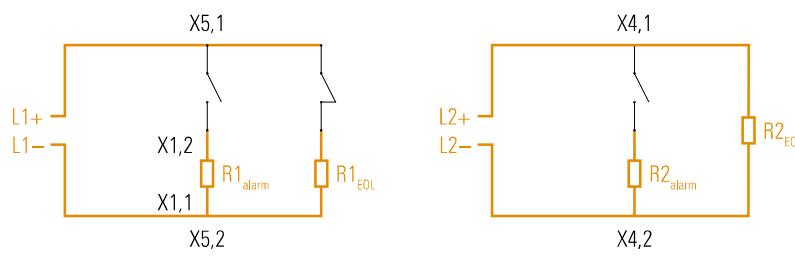


Pre-alarm + fault

Main alarm

## Connection of ROOM·IDENT

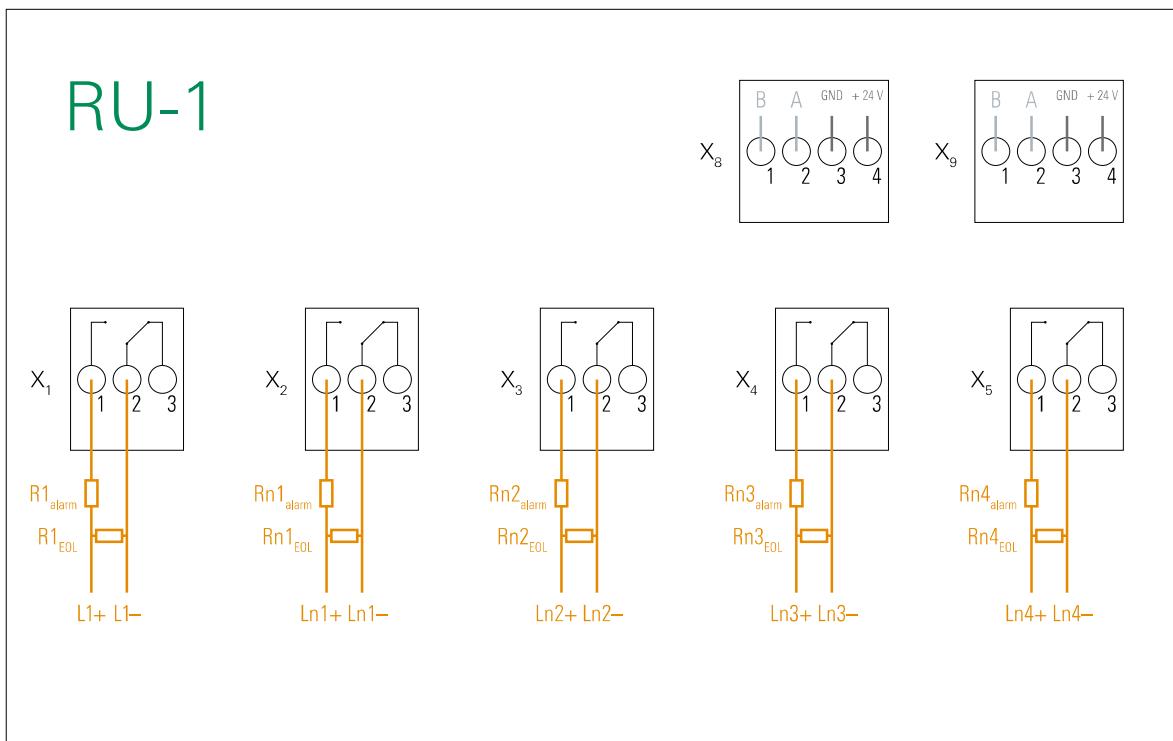

## Circuit diagrams

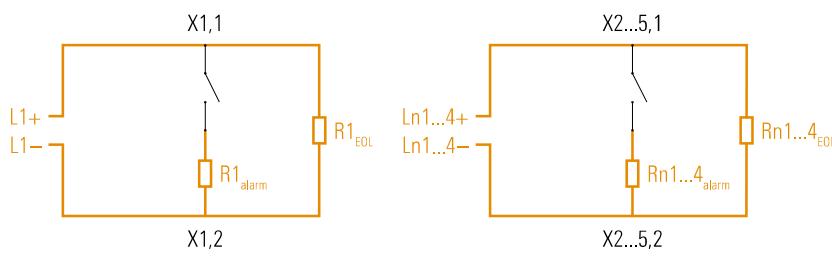

Localized zone A

Localized zone B...E